

MCX Troubleshooting Guide

Device	Test	Solution
Power	Try all functions and listen to see if pumps are running.	<p>Check connection to battery and make sure battery is fully charged.</p> <p>Check fuse (025-80326-00).</p> <p>Check power cable (370-80027-00) with a voltmeter.</p> <p>Check fuse holder (050-80010-00) to make sure it is not broken.</p>
Waste pump	<p>Place wand on end of black hose.</p> <p>Place end of wand into container.</p> <p>Place valve to Empty Waste position.</p> <p>Open valve on wand and press Empty Waste switch. Should see coolant moving from Waste Coolant Tank to container.</p>	<p>If fluid is trickling out of wand check black hose for kink.</p> <p>Check impeller (located behind the hose holder) and make sure it is not damaged.</p> <p>Make sure plug is open on the plastic cap so tank can vent.</p> <p>If unit won't Lower Radiator do an Empty Waste tank first to re-prime the pump.</p>
Fill pump	<p>Place wand on the end of the green fill hose.</p> <p>Place valve to Fill Radiator position. Place end of wand into container.</p> <p>Open valve on wand and press Fill Radiator switch. Should see coolant moving from New Coolant Tank to container.</p>	<p>Check the check valve at the end of the pick up tube on the New Coolant Tank.</p> <p>Switch coolant tanks and see if the other one works.</p> <p>Make sure the plug is open on the plastic cap so the tank can vent.</p>