



RTI Technologies, Inc  
 10 Innovation Drive  
 York, PA 17402 USA  
 Phone: 717-840-0678  
 Web-site: www.rtitech.com

**Bulletin No:** 562-80003-00

**Issued:** July 30, 2007


<b>Subject:</b>	Checking Moisture Filter Element - NitroPro
-----------------	---

Model Numbers Affected:	All NTF machines with catalog numbers beginning with 455
Manufacture Dates:	All
Serial Numbers Affected:	All
Tools Required:	None
Parts Required:	None
Supplemental Document:	None
Action Required:	None – information only


The condition of the Filter Element can only be checked when shop air is connected to the unit and it is in the FILL TIRE mode of operation with Nitrogen being generated and filling the tank. It may be necessary to press the trigger on the fill wand to cause the tank filling. At all other times the Indicator will not be visible.

The Indicator is shown in the red area in the illustration below.

The Filter Element must be changed when the indicator moves into the CHANGE area and at least annually to protect the membrane warranty.

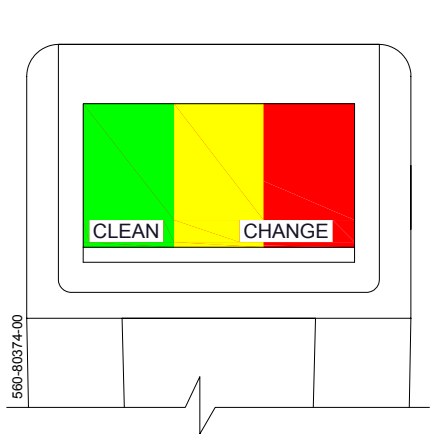

Indicator not visible when not connected to shop air and filling the tank with Nitrogen

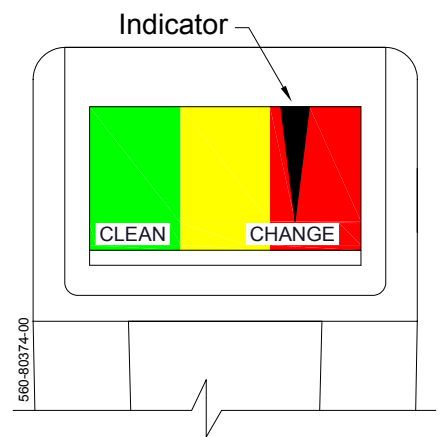

Indicator is visible when connected to shop air and filling the tank with Nitrogen