


OPERATION GUIDE MCX-1

RTI TECHNOLOGIES, INC.

SET UP


1. Remove the New Coolant Tank cap and fill the tank with new coolant and water in the proportions specified by the coolant supplier. The tank can be disconnected and moved to a bulk storage and fill area if desired.
2. Replace the tank cap. Make sure the green hose is securely connected. Slide the tank to the front so the liquid level can be seen through the front panel slot.
3. Fasten the clips on the tank strap to secure the tanks in the MCX-1.
4. Verify that all switches are in the off position.
5. Connect the red power clip to the "+" (positive) post of the vehicle battery. The battery must be 12 volt.
6. Connect black power clip to an engine ground (not the negative post of the battery).

READ OPERATION MANUAL FOR SAFE OPERATING PROCEDURES

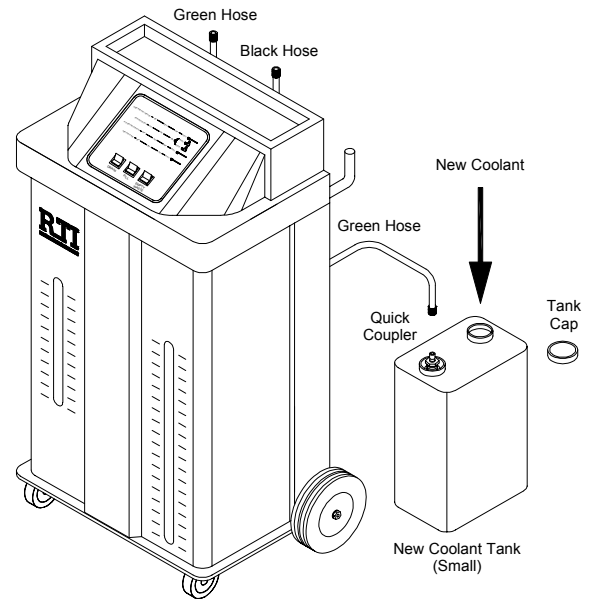

LOWER COOLANT LEVEL

1. Slowly and carefully remove the cap from the radiator.
2. Remove cap from overflow container.
3. Attach the wand to the black hose. Close the valve on the wand.
4. Press the top of DRAIN selector switch to turn on pump.
5. Use the Wand to empty the overflow container and lower the level of coolant in the radiator to a level just below the upper hose connecting the radiator to the engine. Open valve on wand as required.
6. Press bottom of DRAIN selector switch to turn off pump.
7. Replace caps on the radiator and overflow container.

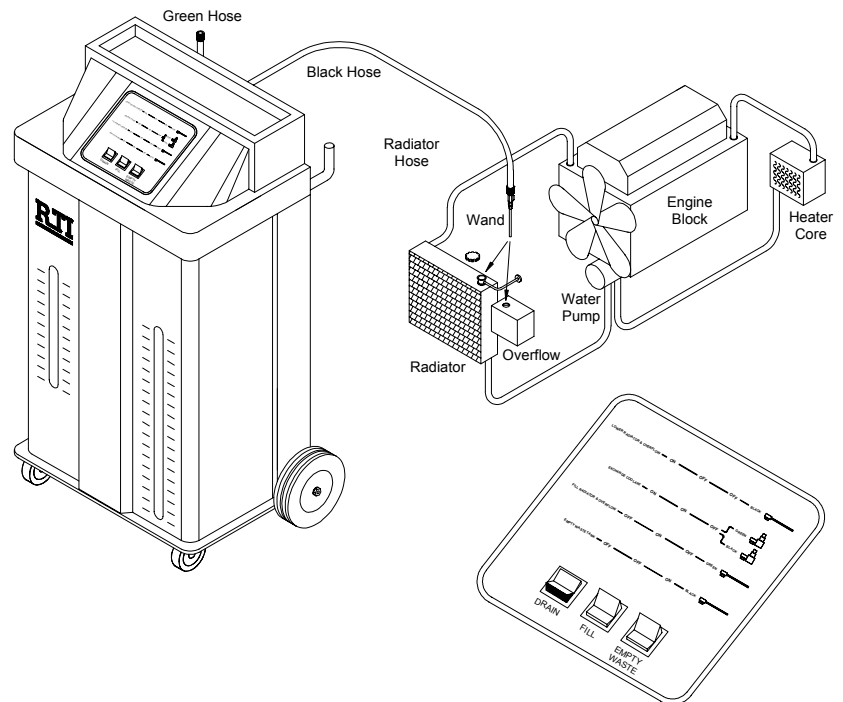

Technical Support: 800-468-2321 (Ext. 259)

035-80800-00


REPLACE COOLANT

1. Disconnect the radiator hose from either the engine or the radiator.
2. Install a Hose Adapter and Step Adapters (Figure A).
3. Connect the Green and Black hoses from the MCX-1 to the Step Adapters. **BE CAREFUL - GET THEM RIGHT !!!!**
4. Open the valves on the two Step Adapters.
5. Check levels in the New Coolant Tank and the Waste Tank.
6. Press the top of FILL and DRAIN selector switches to turn on the pumps.
7. Watch the level of coolant as it lowers in the New Coolant Tank. Press the bottom of the FILL and DRAIN selector switches when it reaches the correct level.
8. Close the valves on the Step Adapters and disconnect the black and green hoses.


COMPLETE THE JOB

1. Install Wand on black hose (Figure B).
2. Remove the cap from the radiator.
3. Press top of DRAIN selector switch to turn on pump.
4. Use the Wand to lower the level of coolant in the radiator to a level just below the upper hose.
5. Remove Adapter Hose and Step Adapters.
6. Reattach the radiator hose.
7. Install the Wand on the green hose (Figure C).
8. Press the top of FILL selector switch to turn on the pump.
9. Open the valve on the Wand to fill the radiator and overflow container to the maximum levels.

A

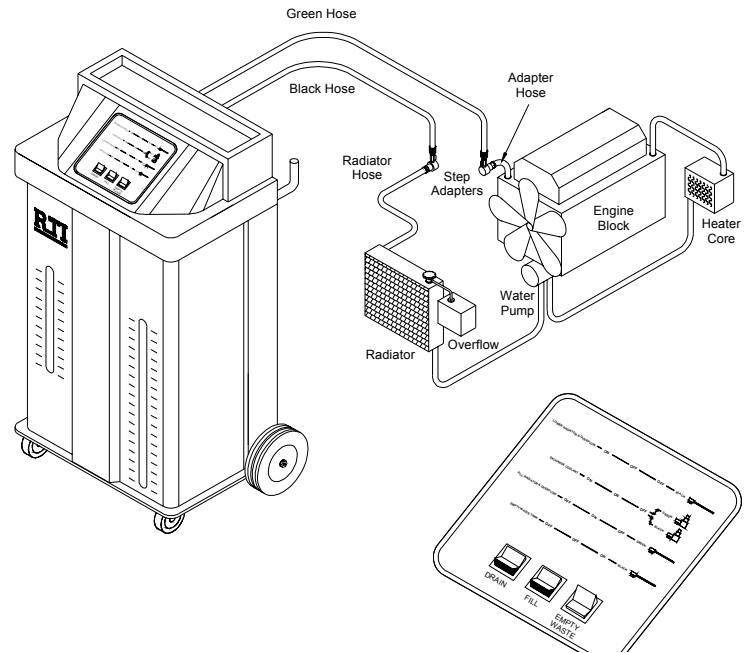

B

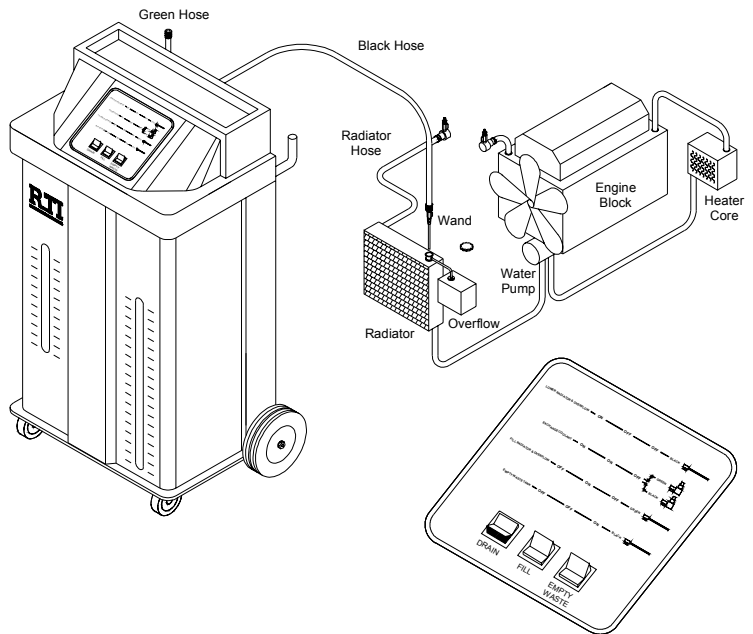

C

