


OSX ADAPTER INSTRUCTIONS

GM 2.2 ECOTEC


ADAPTER PREPARATION

1. Ensure that the three hex plugs are tight in the adapter. Use a 6mm allen wrench to tighten.
2. Remove the black and red adapter hoses from the standard 90 degree adapter. Verify that each hose has a nylon washer on top and bottom as shown in the illustration.

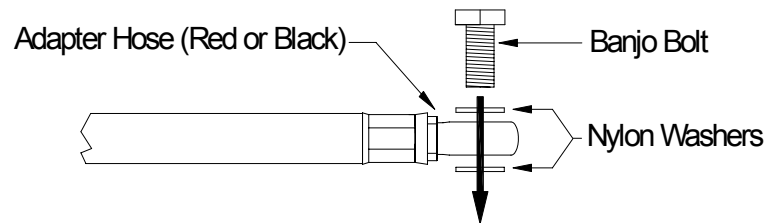

ADAPTER INSTALLATION

1. Remove oil filter and canister from the engine using a 1-1/8" socket.
2. Thread OSX adapter into engine and tighten using a 1-1/8" socket.
3. Remove most accessible hex plug using a 6mm allen wrench.
4. Install the black adapter hose into the open hole created in step 3, use an 11/16" socket to tighten. **Make sure that both nylon washers are installed as shown above to prevent leaking.**
5. Install the red adapter hose in the center threaded hole of the adapter marked with red dye. Use an 11/16" socket to tighten. **Make sure that both nylon washers are installed as shown above to prevent leaking.**

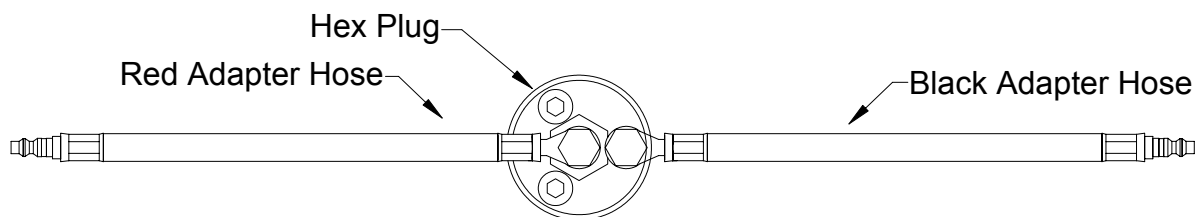

6. Connect Red and Black service hoses from OSX to corresponding colored hoses on the adapter.
7. Start vehicle, check for leaks and correct if necessary.
8. Continue with standard operations as found in the OSX operation manual.