


# FHS-100 Instructions




Quick Connect port on top of FHS-100 for various hose adapters shown below.

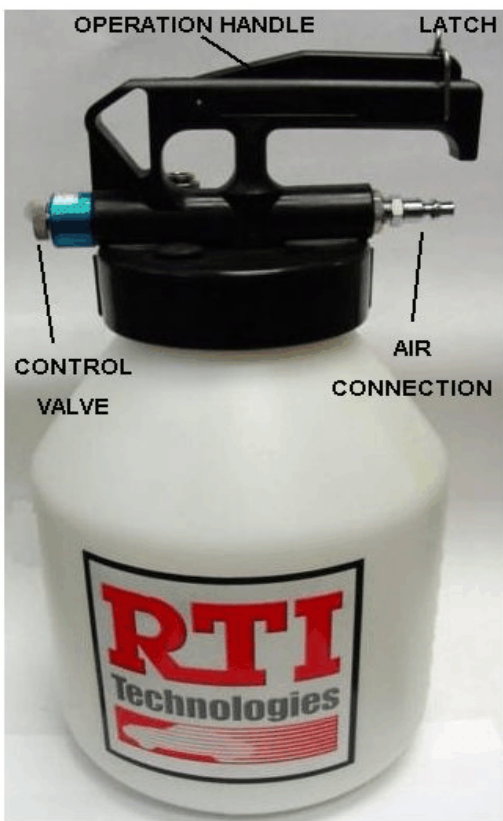

Depress handle to operate. Latch holds handle in pressed position



**Control Valve** Fully clockwise for moving fluid from FHS-100 into device being serviced. The FHS-100 will be pressurized.  
Fully counter-clockwise for removing fluid from device being serviced. The FHS-100 will be in a vacuum.  
Be gentle when turning valve - do not force.

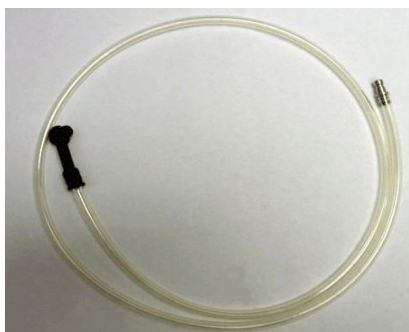

Brake Bleeder Extraction



Dip Stick Extraction



Flexible Fill Tube with Control Valve



Rigid Fill Tube