

RTI Technologies, Inc.
10 Innovation Drive
York, Pennsylvania 17402 USA
Phone: 717-840-0678
Web: www.rtech.com


OPERATION GUIDE

RRC770

Refer to Operation Manual for Cautions


RECYCLE

1. Press top of POWER ON
2. Press top of RECOVER/RECYCLE
3. Recover refrigerant from High & Low Sides of A/C System
4. When light stays off for at least 2 minutes recovery is complete
5. Purge Air (Refer to Air Purge Guide on Back)

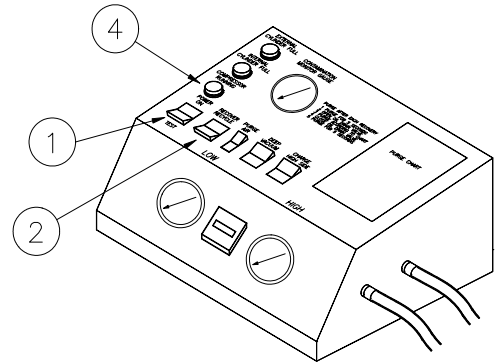

CHARGE (Refer to Conversion Chart on Back)


1. Close valves on low and high side hoses
2. Press top of POWER ON
3. Press top of CHARGE/HIGH SIDE
4. Set O-Ring on Charging Cylinder to correct charge amount
5. Open valve on end of high side hose
6. Charge correct amount into high side of A/C System

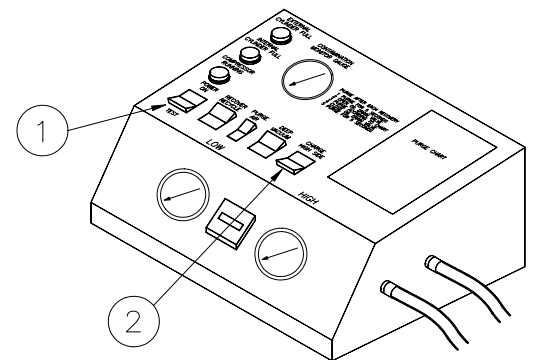

DEEP VACUUM



1. Press top of POWER ON
2. Press top of DEEP VACUUM

(30 minutes recommended, only if system was opened for parts replacement.)

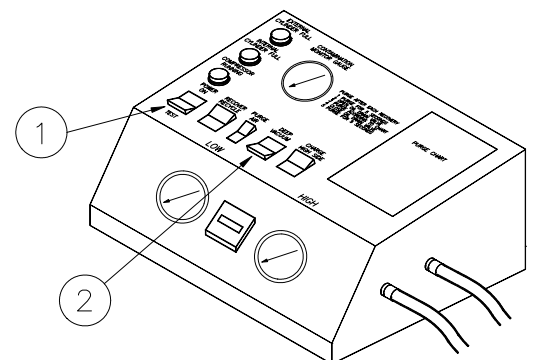

AIR PURGE GUIDE

1. Press top of POWER ON
2. Press and hold PURGE AIR for 5 seconds
3. Open Oil Drain Valve and drain oil. Leave open.
4. Press and hold PURGE AIR until pressure on CONTAMINATION MONITOR GAUGE approximates that shown for the ambient temperature on chart.
5. Close Oil Drain Valve
6. Press and hold PURGE AIR for five additional seconds

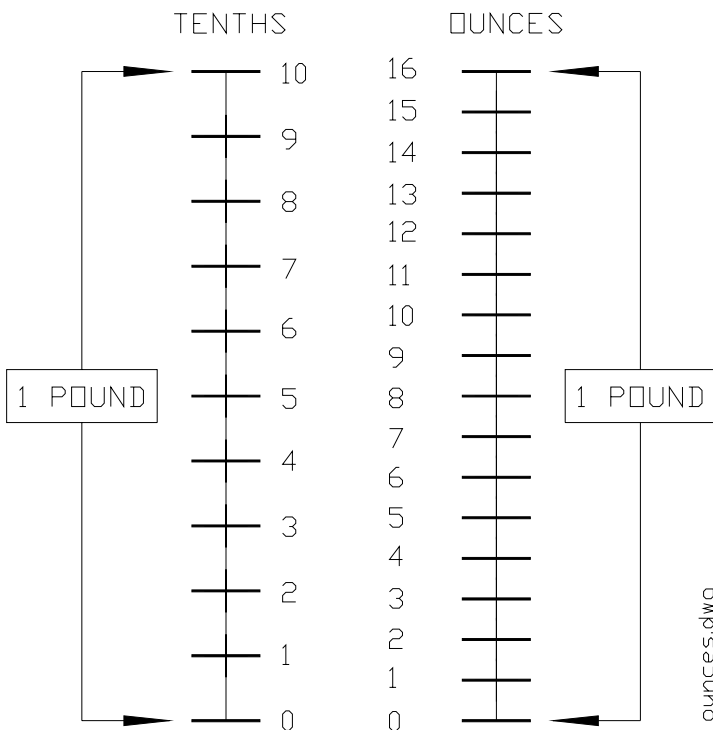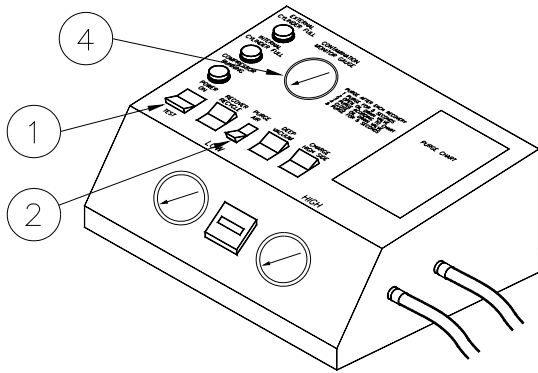

ounces.dwg

°C	°F	R134a	R12
-1	30	40	42
0	32	42	44
1	34	44	46
2	36	46	48
3	38	49	50
4	40	51	52
6	42	54	54
7	44	56	57
8	46	59	59
9	48	61	61
10	50	64	64
11	52	67	66
12	54	70	69
13	56	72	72
14	58	76	74
16	60	78	77
17	62	82	80
18	64	85	83
19	66	88	85
20	68	92	88
21	70	95	92
22	72	97	95
23	74	104	98
24	76	107	107
26	78	110	105
27	80	114	108
28	82	118	112
29	84	123	115
30	86	127	118
31	88	130	123
32	90	135	127
33	92	140	130
34	94	145	135
36	96	148	138
37	98	153	143
38	100	157	147
39	102	163	150
40	104	167	155
41	106	173	160
42	108	180	165
43	110	185	168
44	112	190	173
46	114	195	178
47	116	200	183
48	118	207	188
49	120	213	193

Pressures in PSIG

Conversion: Tenths of a Pound / Ounces